



# TE-D01i

True Wireless Earbuds  
User Manual

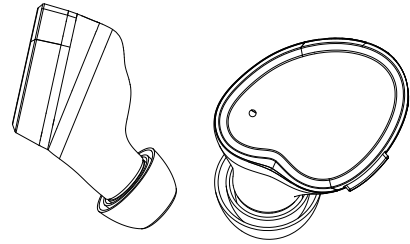

User Manual: v1.04


## 1 Names of Parts

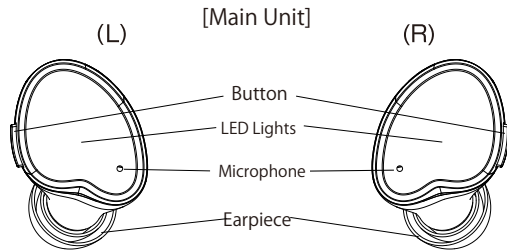

### Accessories



 ■ USB Type C Cable: 1



■ Removable Face Covers



■ Standard Eartips:  
1 Pair of Each Size (SS/S/M/L)



■ Foam Packing:  
1 Pair of Each Size (S/M)




■ Reversible pouch

## 2 Power ON/OFF


### ● Power ON

Take out the earbuds from the charging case.

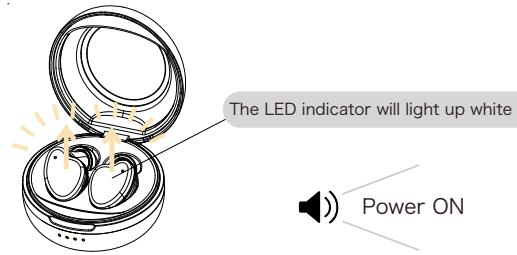

\*Press the buttons (left and right) once to power on if the charging case is not nearby on first use, while the earbuds are powered off.


### ● Power OFF

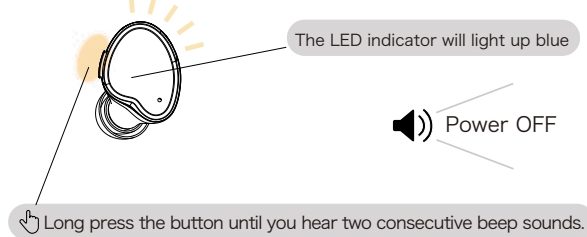

## 3 Pairing


### ● How to pair

#### ① Turn on the Bluetooth function of the device.

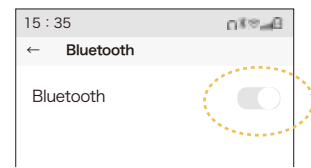


#### ② Put the earbuds into pairing mode.

(Ex.) When pairing from left side (Please pair your earbud from one side.) :  
Take out both left and right earbuds from charging case, and press the left side button twice consecutively.  
\*L side will turn to pairing mode automatically when removed from case on first use.

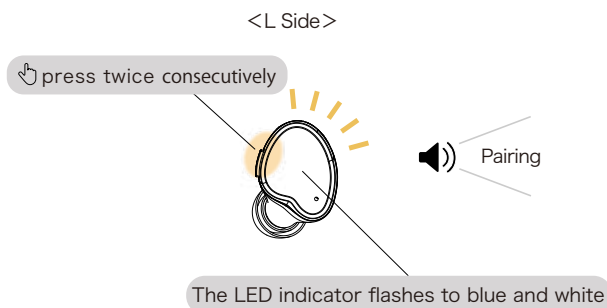


#### ③ Connect to the device.

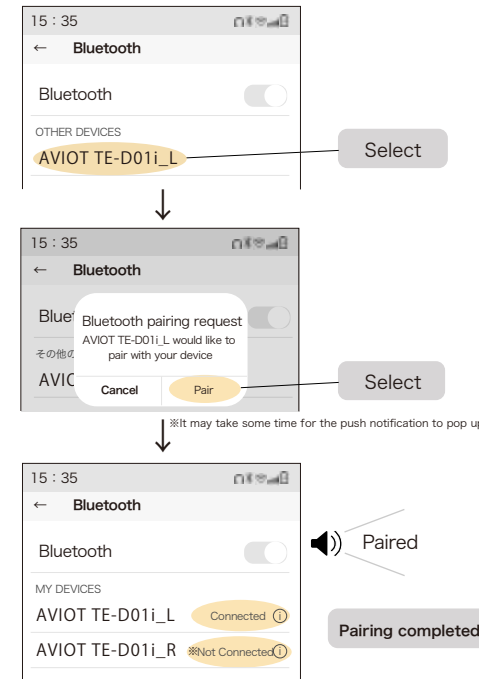

\*Depending on the OS version of the device used, the earphones may be displayed "Headset" but this has no affect on any functions.  
\*When pairing from the R side, the notation of connection will be reversed.

### ● How to change the pairing device


★ When changing from the device :

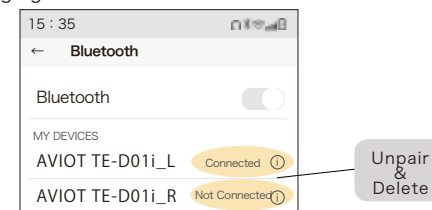

Reconfigure from step 1 "● How to pair" when pairing with different device.

★ When changing from the earbuds :

Long press the button of one side of the earbud until you hear three beep sounds.

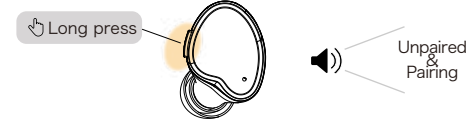


Reconfigure from step 3 "● How to pair" on the other device.


※ If pairing failed or display of the earbuds were not found, delete the previous pairing history from the device, switch the Bluetooth OFF and ON and try again.

### ● How to Reset (In case of misoperation)

① Delete the connecting device's Bluetooth settings.

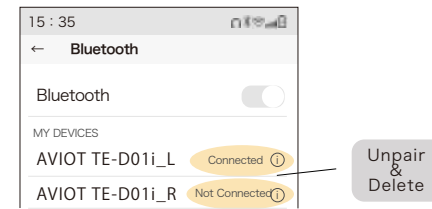

② Long press the button after the power turns off.

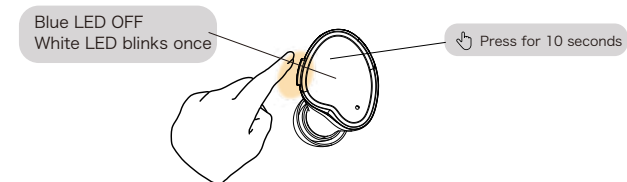


※ After reset, L side will turn to pairing mode automatically.

## 4 Ambient Microphone ON/OFF


### ● Ambient microphone ON

(Ambient microphone is a function which propagates outside sounds through the earbuds.)  
Pressing the L side button of once to pause the music and activate the ambient microphone.

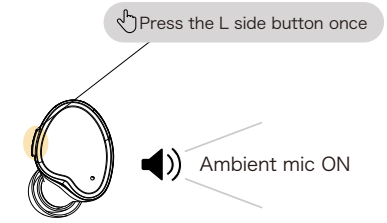

### ● Ambient microphone OFF

 
Music will play automatically when turning OFF the ambient microphone.



※ Turning on the ambient microphone while standby

Able to activate ambient microphone ON/OFF even when earbuds are not connected to Bluetooth if the power is turned ON.

## 5 Operation Overview

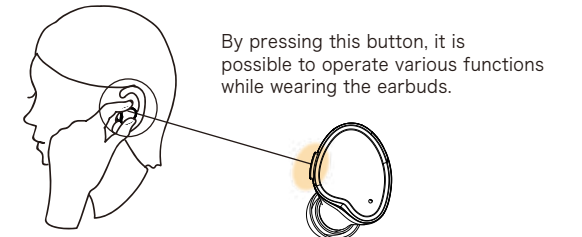

### ● Operations

		L	R
🎵	Play	—	Press once
	Stop	—	Press once
	Skip track	—	Press twice consecutively
	Previous track	—	Press three times consecutively
☎	Receive call	—	Press once when receiving a call
	Call end	—	Press once during the phone call
	Reject call	Press button for one second, then release	
🔊	Raise volume	Press three times consecutively	—
	Lower volume	Press twice consecutively	—
🔗	Pairing mode	Press twice consecutively	· Long press until you hear three consecutive beep · Press twice consecutively
🎤	Activate	Press for two second, then release※1	Press for two second, then release※1

※ 1 Siri/Google voice command activation is only on the base unit.  
※ Functions may differ depending on connected device.

# 6

## LED Displays

●LED displays ※ The unit connected first will be the base unit.

 
	Base unit	Subsidiary unit
Power ON	white	Lights up
	blue	Lights up
Power OFF	white	Lights up
Standby: Not Connected	white 3s	Flashes twice
	white 3s	Flashes twice
Dialing	white 3s	Lights up once
Receiving a call	white 1s	Flashes twice
	white 3s	Lights up once
During the call	white 5s	Flashes twice
Pairing mode	white blue	Flashes white and orange alternately
	white blue	Flashes white and orange alternately
Charging	blue	Lights up
		Lights off

※May not display as above depending on connected device.  
 ※The power will be turned off automatically when the earbuds are fully charged.

# 7

## Charging

●Charging



※The overvoltage protection function may prevent charging when the voltage is higher or lower than the specified voltage.

● The battery indicator will flash when charging the charging case.


LED	Battery level
● ● ● ●	1~25%
○ ● ● ●	25~50%
○ ○ ● ●	50~75%
○ ○ ○ ●	75~100%

※ If the charging case's battery runs out during earbuds charging, the earbuds may automatically connect with the connecting device. This is not due to malfunction. Please frequently charge the charging case.

※The battery performance will drop if it is left uncharged for a long time. Please charge regularly. (Recommended: Once a month)  
 ※If the earbuds are mounted in the charging case while still powered ON, they will not automatically turn OFF. Earbuds will turn off automatically once they are fully charged. The earbuds will automatically turn ON when removed from the charging case.

●Checking the battery level

The battery level are able to check on connected devices.

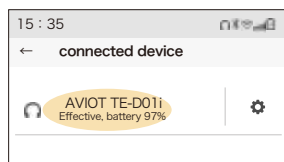


※For iPhones : By adding a widget, the battery level can be displayed.

# 8


## Precautions

●How to wear

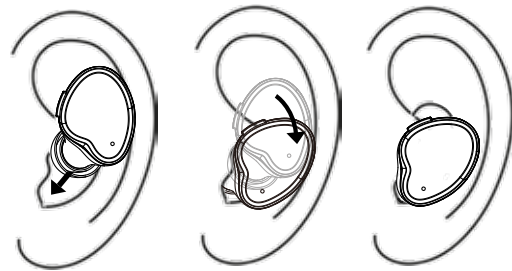

· Please adjust the earbuds to a comfortable fit before use.

●How to choose and attach the eartips

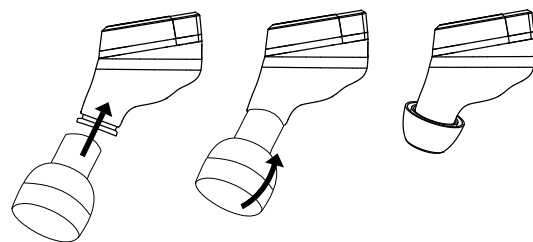

· Turn the eartip inside out, and insert the shaft into the nozzle.  
 · Two different types of eartips are included. Please choose the pair that fit you well.  
 ※ Better fitting eartips will improve sound quality.

●Bluetooth® is a technology using the 2.4 GHz frequency radio band. Notes on radio wave interference.

- Bluetooth® wireless technology operates within a range of approximately 10 m (30 feet). Maximum communication range may vary depending on obstacles (human body, metal, wall, etc.) or electromagnetic environment.
- Bluetooth® communications may be disabled, or may cause noise audio dropout under the following conditions.
  - In places where 2.4GHz wireless LAN is installed, a microwave oven is used, or in general electromagnetic waves are generated.
  - When people are interpositioned between the earbuds and the Bluetooth device.
  - When there is an obstacle, such as metal or a wall, between the earbuds and the Bluetooth device.
- Bluetooth® radio waves can affect the operation of other electronic devices as well. Please turn off the earpieces and switch off the Bluetooth® function or power off the Bluetooth® devices in the following places:
  - Inside an airplane. (Please follow all posted warnings and directions from authorised personnel.)
  - In hospitals/hear priority seats on trains/in places where flammable gas is generated, such as gas stations
  - Other places where devices that operate with sensors e.g., fire alarms are installed

●Things to avoid in order for long-term use

- Over-discharge  
The battery performance will drop due to over-discharge, if it is left uncharged for a long time. Please charge regularly. (Recommended: Once a month)
- Deformation or damage  
The earbuds and the accessories such as eartips may be deformed, when forces or weight are constantly applied to them. Please make sure to store them properly. Please pay close attention not to drop or subject them to strong impact.
- Storage places that should be avoided  
Humidity, dust, and high temperatures can cause damages to high precision electronic parts. When storing this product, please avoid places with high humidity, dust, smoke, steam, direct sunlight, or inside a car where the temperature rises.
- Water proof  
Although the earbuds are processed with watherproof coating, using them with wet hands, in the rain, or in the snow can cause damage to the USB terminal port. When the outside of the unit is dirty, please clean it by wiping with a soft dry cloth. The charging case is not waterproofed.

# 9

## Terms of Free Warranty

Under the terms of this warranty, this company will provide a replacement free of charge in the case of spontaneous failure due to normal usage. In order to make an inquiry, please confirm the store where the product was purchased as well as the date of purchase. Please also prepare proof of purchase, such as receipt from store of purchase or statement of delivery, before inquiry.

1. The warranty period is for 12 months from date of purchase and is only valid in the Hong Kong or Macau.
2. Changes to this product may be made without notice due to improvements and so on. As this product uses Bluetooth®, there may be interference with reception when near microwaves or other sources of strong signals. Please read the instruction manual included with this product or this company' s videos before using this product in order to use it properly. Brand names, product names, and so on appearing on the packaging or instruction manual are registered trademarks of companies or individuals.
3. The warranty is not applicable in any of the following cases:
  - a. Absence of the purchase receipt, delivery slip, or other proof of purchase from the dealer.
  - b. Repaired or modified by outside our company/dealer service.
  - c. Malfunction due to product misuse (including breakage by excessive force and burnout), neglect (fall or physical shock, etc.) or improper storage.
  - d. Any problems caused by using a power source or voltage that does not suit the product.
  - e. Things related to consumable goods.
  - f. Malfunction caused by another device.
  - g. Outward damage to this product' s packaging or plugs. (when occurring after purchase)
4. Non-Aviot products are not covered by the warranty even if they are the same.

<Disclaimer>

This warranty does not apply to damage or accidents resulting from improper handling. This also applies to impact or dropping that occurs in shipping after purchase and natural disasters such as lightning or fire. Connection and operation with all Bluetooth® devices are not guaranteed. Aviot takes no responsibility for damage, accidents, or loss or damage to data caused by using this product with other devices. And this company takes no responsibility for damage, accidents, or loss or damage to data caused to computers, OS, other software, or devices. This warranty is valid only in the country ( or region) you purchased.  
 5. Substitute devices will not be provided during repair or replacement period. Please be forewarned.  
 6. In the event that the product is determined to be outside of warranty, a fee for return will be requested. Please be forewarned.

# 10

## On Safety

⚠Warning

- (You may suffer serious injury or death due to fire or electric shock if you do not follow these instructions)
- Please keep the product out of the reach of children and animals after use. Earbuds and its accessories can be swallowed.
- Do not disassemble as this may cause electric shock or malfunction to the product.
- When the earbuds are attached, it is difficult to hear sounds from the outside, including the warning sounds. Do not use this product in places where it is dangerous if ambient sounds cannot be heard.
- Please make sure to use the included USB cable when charging. Explosion, battery leakage, or overheating may cause stain, fire or injury.

⚠Caution

- (You may be injured or your household property, may be damaged if you do not follow these instructions)
- Listening at a loud volume for a long time may cause hearing damage. In order to protect your hearing, please make sure not to turn up the volume too high. In addition, regardless of the volume level, listening to the unit for a long period of time can cause ear discomfort or pain. Please be sure to take a break by removing the earphones once an hour.
- If you feel this product causes allergies, please stop using and consult a doctor or the store where you purchased the product as soon as possible.
- Prolonged skin contact with the powered-on product can cause low-temperature burns.
- You may feel a tingling sensation in your ears due to static electricity that caused by friction with the clothes etc.

♻️Recycling rules for rechargeable batteries

The rechargeable batteries built in the earbuds can be recycled. Do not remove the rechargeable battery by yourself. Please contact the Customer Support.

# 11

## FAQ

Earphones/ charging case are not working properly

When you have difficulties in charging your earphones/charging case, pairing earphones to your devices, connecting to earphones smoothly or any operational issues, you could first try to reset the earphone according to this user guide in part 3. If you still have problems with the earphones/charging case after the attempt of resetting the earphone, you could try to contact our customer service centre via telephone (+852 2618 7388 ) or email ( info@winnersmart.com.hk ) for help.

Losing or damages to earphones/ charging case

If you have lost or damaged your earphones/ charging case, you are entitled for a trade-in offer for the lost or damaged part(s) once within 12 months from date of purchase and is only valid if the purchase is in Hong Kong or Macau. You can contact our customer service centre via telephone (+852 2618 7388 ) or email ( info@winnersmart.com.hk ) for detail information.

## Applications



User can download "AVIOT Sound XXX" app from Apple Store or Google Play to switch the greeting language, adjust the EQ and carry-out firmware update.